

ALPHA


# PAL153 Installation Guide

Aug,2001

X001ZF0Q-01

over the lever arm. The large step goes over the Socket cam box.

side of the clip then will attach to the cam box side of the CPU socket.

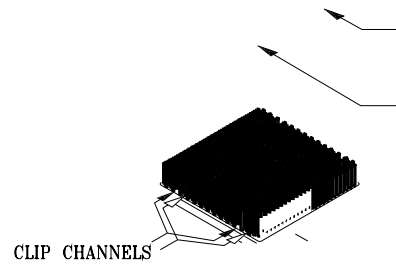


installing the clip in the other set of channels.


alcohol or acetone (nail polish remover), would be ideal.

- 

- 

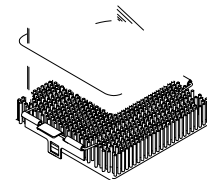

do not use excessive force. Make sure the clip is installed correctly on socket tab.

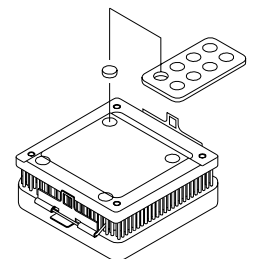

**STEP 6** Final assembly inspection:

Prior to powering up the CPU, visually inspect the heatsink to ensure it is sitting level on the CPU. Ensure that the heat sink base is only making contact with the CPU die, not the socket cam box or lever arm.