


ALPHA

UBC60/UB60 with CL57LT
Installation Guide

Oct, 2001

X001ZF0W-01

STEP 1 Make sure the heat sink does not interfere with socket lever etc... before trying to assemble the heat sink unit. Note proper location of the step in the heat sink base. Be sure to insert the clip in the direction shown in the following figure. Please note that the clip is asymmetrical, with an off-center pressure point. This pressure point must go directly over the CPU die. The long side of the clip goes over the cam box side of the CPU socket.

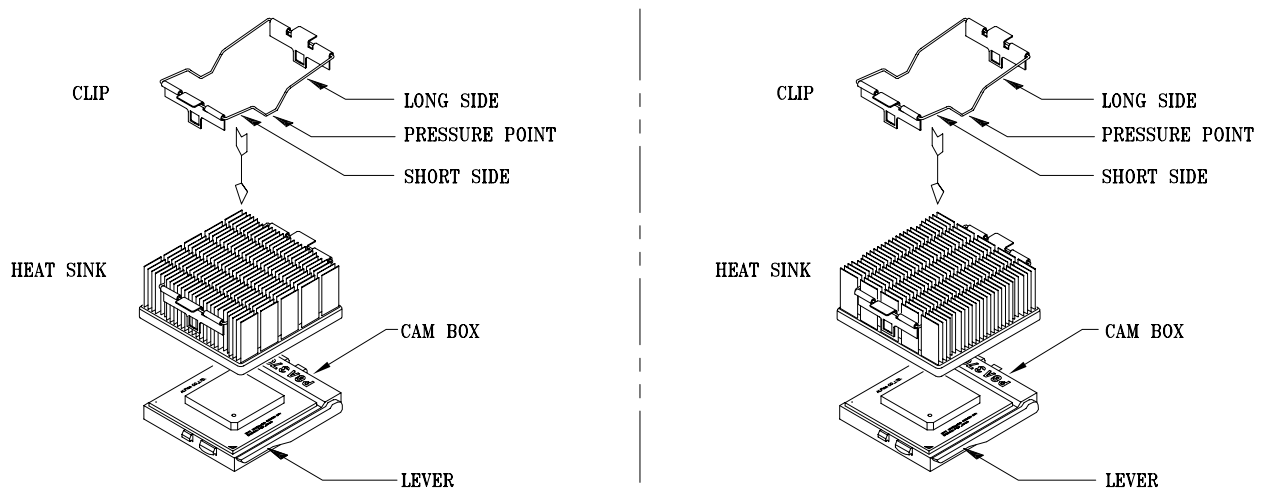

STEP 2 Apply thermal grease to heat sink and CPU thinly and evenly.

NOTE : Applying excessive thermal grease causes decrease in thermal performance. To avoid possible board damage, do not use excessive force. Make sure the clip is installed correctly on socket tab.

STEP 3 Final assembly inspection:

Prior to powering up the CPU, visually inspect the heatsink to ensure it is sitting level on the CPU.

Ensure that the heat sink base is only making contact with the CPU die, not the socket cam box or lever arm.